

How to secure your tent with chains & hooks



Set up the tent
on the platform.



There are a number of ways to use the chains and hooks. This will depend on your tent's size and shape. Here are 3 options:


A



Insert the chain hook through the tent strap loop.



Hook the chain tightly to the platform eyelet.

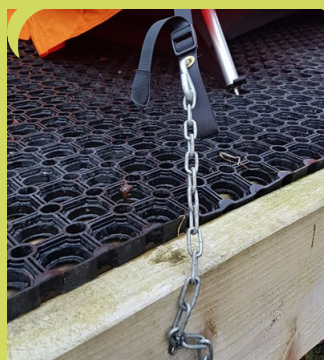

B



Thread multiple tent loops by connecting two chains & anchoring them to the platform eyelet.


C



Use two chains to fix a corner point.



Anchor the tent guy lines to the platform eyelet
to secure the tent.

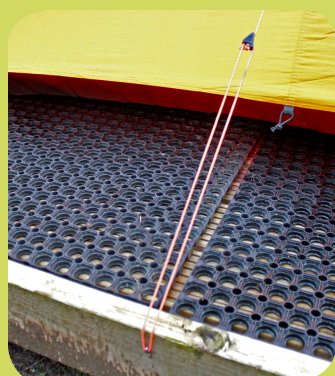

Your tent is ready!